

CAUTION

Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (NiCad or NiMH) batteries. Do not use rechargeable or reusable alkaline batteries. Dispose of old batteries properly.

WARNING

AVOID EYE INJURY- Do not stare directly into beam or shine it directly into anyone's face. Doing so for more than a few seconds could cause retinal damage. Do not allow children to use LED lights unless under the supervision of an adult.

CAUTION:

Make sure that the firearm has the safety on and is unloaded to avoid unintentional discharge. Make sure the mount is secure and test your flashlight for proper functionality.

CAUTION:

Always remove gun light from firearm before attempting to change batteries or to perform any maintenance.

www.iprotec.com

CALIFORNIA REQUIRED  WARNING
Cancer and Reproductive Harm
www.P65Warnings.ca.gov/product

**FL1
STD**



Brightness



Distance



Run Time



Water-
Resistant



 
Impact-
Resistant



400 Lumens
2 HRS
Distance: 179 M



40 Lumens
20 HRS
Distance: 57 M



400 Lumens
5 HRS
Distance: 179 M

WHAT'S INCLUDED:

- LG400 firearm light
- Universal mount
- Standard switch/cap
- Dual-pressure switch/cap
- Removeable red lens filter
- Battery cartridge
- 3 AAA batteries




iPROTEC

LG400

LONG-GUN MOUNT

 [400 lumen firearm light]

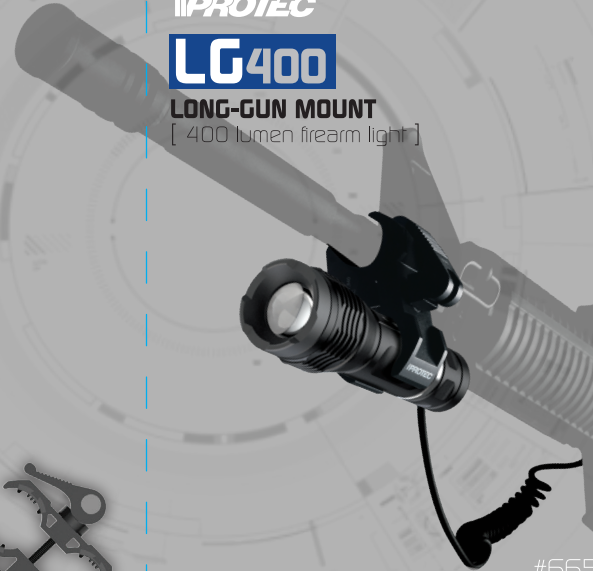

#6652

USER MANUAL

OPERATION

LG400 is equipped with 2 power buttons for quick access to steady beam or defensive strobe.

- A** Press the power button once to turn the light ON
- B** Press the side button to cycle through the 2 light modes (High & Low)
- A** Press the power button again to turn the light OFF

INSTANT DEFENSIVE STROBE LIGHT (MOMENTARY)

1. While the light is OFF, the Defensive Strobe light mode can be instantly activated by pressing and holding down the side button **B** until you release the side button.

INSTANT DEFENSIVE STROBE LIGHT (CONSTANT)

2. While the light is in High or Low light mode, the Defensive Strobe light mode can be instantly activated by:
 - Pressing and holding down the side button **B** for 2 seconds.
 - While strobe is on, press side button **B** once again to return to the last active light mode (high or low).
 - Press the power button **A** to turn light off.

6X ADJUSTABLE ZOOM

The LG400 is equipped with a 6x adjustable zoom that changes from spotlight to floodlight with a simple twist of the bezel.

1. Turn the head of the flashlight clockwise for floodlight, perfect for short-range lighting.
2. Turn the head of the flashlight counter-clockwise for spotlight, perfect for focusing light up to 141 meters.

Flood

turn clockwise

Spot

Spot

turn counter-clockwise

DUAL PRESSURE SWITCH

For remote operation, the pressure switch uses (1) Steady and (2) Momentary operation to control light modes.

- 1 STEADY ON:** This standard ON/OFF button activates the light. Light will remain on until button is pressed again.
- 2 MOMENTARY ON:** This button is pressure sensitive. Light will only activate when button is kept pressed.
- 3 INSTANT STROBE SIDE BUTTON:** This button instantly activates the defensive strobe mode. Button also navigates the lighting modes when light is on.

 


To navigate lighting modes with the dual-mode pressure switch, press (1) STEADY or (2) MOMENTARY button to activate (user preference) then press the (3) INSTANT STROBE SIDE BUTTON to cycle through the lighting modes. Defensive strobe mode can be accessed while the light is OFF by pressing the instant strobe side button, or while the light is ON by holding the side button for 3 seconds.

MOUNTING INSTRUCTIONS

The LG400 is designed to mount on long guns. Mount adjusts to fit from 20mm to 32.5mm diameter. Patented universal mounting does not require tools to mount or unmount.

1. Select a location on your long gun that will not interfere with its intended use of operation.
2. Place the two halves of the mount on either side of the barrel and flashlight.
3. Tighten the mount onto the barrel and flashlight using the latch of the mount.
4. Set the latch of the mount in the locked position and test your flashlight for functionality.

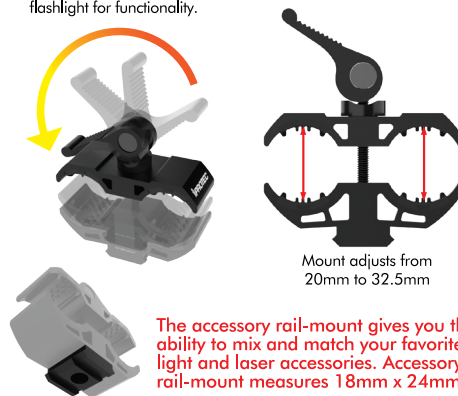

The accessory rail-mount gives you the ability to mix and match your favorite light and laser accessories. Accessory rail-mount measures 18mm x 24mm.

BATTERY INSTALLATION

The LG400 is powered by 3 AAA alkaline batteries. DO not use rechargeable batteries as it may reduce performance capabilities and potentially cause damage to the gun light.

1. To open battery compartment, unscrew (counter-clockwise) the end cap/pressure switch end cap.
2. Remove battery cartridge.
3. Remove old batteries and dispose of properly. Insert new batteries making sure that the negative end (-) is facing the spring.
4. Reinsert battery cartridge into flashlight. Make sure battery cartridge is facing the correct direction as shown.
5. Reattach end cap/pressure switch end cap by turning clockwise.

